

ESSKLASSE



G. Benedikt Karlovy Vary s.r.o.

1. Máje 30
CZ-360 06 Karlovy Vary
Tel. +42 (0) 353 406 111
Fax: +42 (0) 353 406 325
info@gbkv.cz
www.gbkv.cz

Lilien Austria GmbH

Dr. Adolf Altmannstrasse 30
A-5020 Salzburg
Tel. +43 (0) 662 824 176
Fax: +43 (0) 662 830 177
office@lilien.at
www.lilien.at

Porzellanfabrik Langenthal AG

Bleienbachstrasse 22
CH-4900 Langenthal
Tel. +41 (0) 629 190 404
Fax: +41 (0) 629 190 400
info@suisse-langenthal.ch
www.suisse-langenthal.ch



Artikel-Nummer
Article Code
Numéro d'article

Artikel-Nummer Article Code Numéro d'article	Artikel Article Article	Inhalt Volume (cl)	Durchmesser Diameter (mm)	Höhe Height (mm)	Gewicht Weight (g)	inch / OZ
ESK1927	Teller tief Plate deep Assiette creuse	278	51	885		11"
ESK1929	Pastateller Pasta plate Assiette aux pâtes	295	62	1018		11 5/8"
ESK2122	Teller flach Plate flat Assiette plate	221	19	440		8 5/8"
ESK2129		297	25	950		11 5/8"
ESK2133		336	29	1235		13 1/4"
TIM0211	Tasse stapelbar Cup stackable Tasse empilable	10	58	56	110	3 4/8 OZ
ESK1717	Untertasse Saucer Sous-tasse	170	20	240		6 5/8"
TIM0220	Tasse stapelbar Cup stackable Tasse empilable	20	77	63	185	7 OZ
ESK1717	Untertasse Saucer Sous-tasse	170	20	240		6 5/8"
TIM0030	Tasse hoch Mug Tasse haute	33	77	102	290	10 4/8 OZ
ESK1717	Untertasse Saucer Sous-tasse	170	20	240		6 5/8"
TIM1124	Suppentasse stapelbar Cream soup cup stackable	25	97	50	200	8 4/8 OZ
TIM1133	Tasse à consommé empilable	34	103	62	240	11 4/8 OZ
ESK1717	Untertasse Saucer Sous-tasse	170	20	240		6 5/8"
TIM1413	Schüssel Bowl Bol	71	132	80	440	5 1/8"
TIM1418		170	183	87	740	7 1/8"
TIM4326	Suppenterrine o/Deckel Souptureen w/o cover Soupière sans couvercle	260	231	109	1700	87 7/8 OZ
TIM4526	Deckel Cover Couvercle			65	580	

Artikel-Nummer
Article Code
Numéro d'article

Artikel-Nummer Article Code Numéro d'article	Artikel Article Article	Inhalt Volume (cl)	Durchmesser Diameter (mm)	Höhe Height (mm)	Gewicht Weight (g)	inch / OZ
ESK3310	Sauciere Gravy boat Saucière	10	46	100		3 4/8 oz
TIM3603	Giesser ohne Henkel Creamer w/o handle Crémier sans anse	4	53	60		1 oz
TIM3515	Milchkanne Milk pot Pot à lait	15	84	170		5 2/8 OZ
TIM3850	Kaffeekanne o/Deckel Coffeepot w/o cover Cafetière sans couv.	53	132	440		21 1/8 OZ
TIM3950	Deckel Cover Couvercle			29	85	
TIM3710	Kaffeekanne o/Deckel Coffeepot w/o cover Cafetière sans couv.	100	171	630		38 6/8 OZ
TIM3960	Deckel Cover Couvercle			33	120	
TIM4160	Teekanne o/Deckel Teapot w/o cover Théière sans couv.	55	88	450		21 1/8 OZ
TIM3960	Deckel Cover Couvercle			33	120	
TIM4302	Zuckerbol o/Deckel Sugar bowl w/o cover Sucrier sans couv.	28	98	52	165	3 7/8"
TIM4502	Deckel Cover Couvercle			104	17	90
TIM4813	Eierbecher Egg cup Coquetier	124	19	585		5 1/8"
TIM5001	Salzstreuer Salt shaker Salière			56	55	
TIM5011	Pfefferstreuer Pepper shaker Poivrier			56	55	
TIM4608	Vase Tablevase Vase			78	215	

